

Zims Add On Relay Kit – Part Number WR1
Universal Wiring Instructions

!Important Safety Notice!

Before installing this relay, or any other electrical component, you should disconnect the negative battery cable.

This relay has five terminals – 87, 87, 85, 86 and 30 – but only four are used. Please note the two 87 terminals are bridged inside the relay.

- The RED wire (Terminal 30) supplies power from the battery to the relay.
- The BLUE wire (Terminal 85) is from switched power, such as your ignition switch, foglight switch, headlight switch, etc. and supplies the trigger signal to the relay.
- The BLACK wire (Terminal 87) supplies power from the relay to your device (headlight, foglight, horn, etc.)
- The YELLOW wire (Terminal 86) goes to chassis ground.