


Installation Instructions for 911.423.999.KIT Aluminum Pedal Kit

Brake/Clutch Pedal

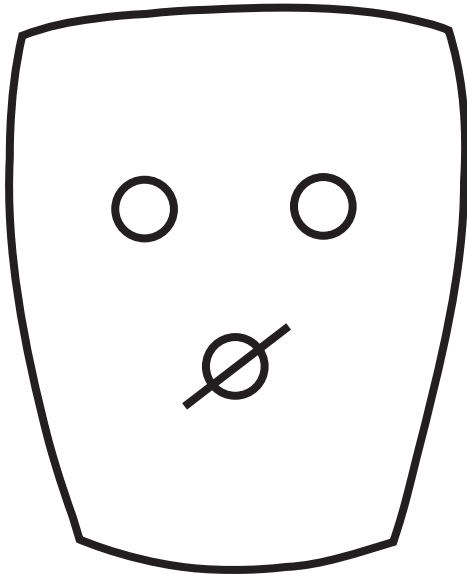


You will need to drill two holes, then install and tighten the supplied bolt and nut accordingly.

Remove factory rubber pad

Place aluminum pedal cover into position and mark hole location

Drill holes with 3/16 drill bit

Accelerator Pedal

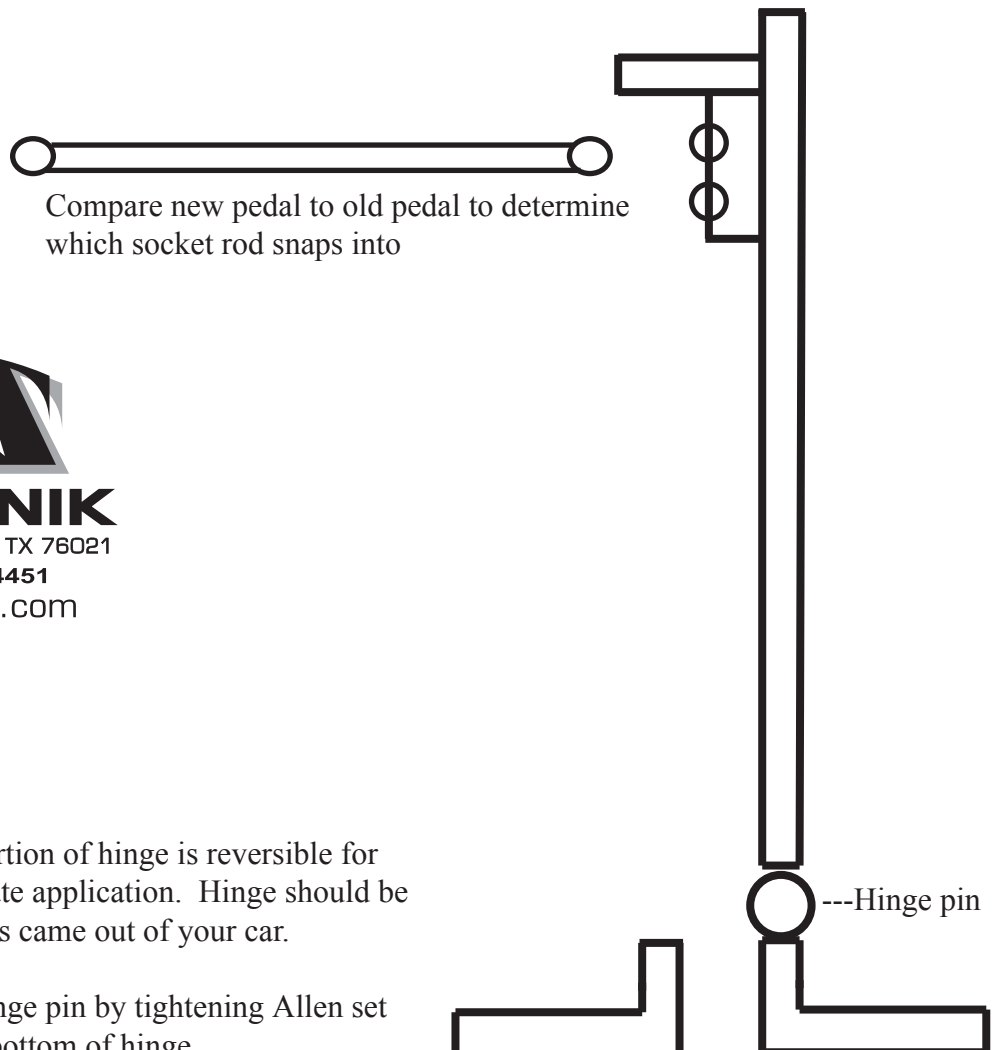

Compare new pedal to old pedal to determine which socket rod snaps into

ZIM
AUTOTECHNIK
1804 RELIANCE PKWY BEDFORD, TX 76021
800-356-2964 817-267-4451
www.zimsautotechnik.com
www.allzim.com

Lower portion of hinge is reversible for early or late application. Hinge should be oriented as came out of your car.

Secure hinge pin by tightening Allen set screw in bottom of hinge